

Mounting of the exhaust pipe

- Use only the hose provided and clip exhaust hose to the back of the air conditioner
- Avoid kinks and bends in the exhaust hose as this will cause expelled moist air to build up causing the unit to overheat and shut down. Figures below will show the correct position.
- The hose may be extended from 300mm to 1500mm but for maximum efficiency use the shortest length possible.

⚠ Warning! The length of the exhaust pipe is specially designed according to the specification of this product. Do not replace it with your own private hose as this could cause the unit to malfunction.

Installation of the remote control

- 1 Remove the lid.
- 2 Place the battery according to the instructions on the lid with the correct polarity.
- 3 Close the lid.

⚠ Opmerking:

- Only use 1x CR2025 3V batteries
- Non-rechargeable batteries are not to be recharged
- Exhausted batteries are to be removed from the remote control and safely disposed of
- If the remote control is to be stored unused for a long period, the battery should be removed
- The supply terminals are not to be short-circuited.



